



**AC2116**  
**Architectural Remote Station**

Version 0.02

Date 12/09/2020

**AC2116 ARCHITECTURAL DIMMER SMART REMOTE**

Version 0.02

**OWNERS MANUAL**

12/09/2020

**DESCRIPTION AND FEATURES**

The AC2116 is a wall mounted, sixteen scene, digital remote for use with the Lightronics LitNet architectural control system. The LitNet host units consist of the AR and AB series of architectural dimmers, the RA rack mount dimmers and the SR & SC architectural controllers. User operation is as simple as it can get (16 numbered scene buttons and an "OFF" control). LED scene indicators always display the active scene number.

The unit fits into a standard double gang wall switch box. The unit communicates with the LitNet host via a 4 wire bus which will accommodate multiple AC2116 units and other remote units. All LitNet wiring is low voltage.

The unit operates in an exclusive mode where one scene may be activated at a time. When a scene is selected, the host fades at a user controlled rate to that scene. A blackout button is also provided to shut off all scenes. Scenes activated by the LitNet host are actually set up and stored in the host. The AC2116 only tells the host which scene to activate. The LitNet host can be programmed to respond to the AC2116 in various ways to create zone controls.

**INSTALLATION****CONNECTIONS****CAUTION**

Remove all power from the AR-1202 before making connections

The AC2116 connects to the Litnet host via a shielded 4 conductor cable arranged as 2 twisted pairs. A data grade, low capacitance cable (less than 25 pf per foot) is required to assure trouble free data transmission to and from the AC2116. One pair connects to the DATA - and DATA + signals. The other pair carries the power (REMOTE V+) and COMMON. The cable shield should be connected to the COMMON.

A connection diagram is provided at the end of this manual.

**SINGLE UNIT:** Connect the 4 cable wires to the screw down terminals on the back of the unit. Connect

the cable shield to the REMOTE COMMON terminal. The other end of the cable connects to the by different methods, Refer to the host product owners manual for additional wiring details.

**MULTIPLE UNITS:** Follow the instructions for a single unit for the first AC2116. Connect the corresponding connector pins of the second unit to those of the first unit. Repeat the procedure for additional AC2116 units.

**MULTIPLE UNITS OF DIFERENT TYPES:** The AC2116 may be connected together with other Lightronics LitNet smart remotes. These remotes all have the same connection scheme. Connect the AC2116 to the other remotes by connecting like signal names together (REMOTE COMMON to REMOTE COMMON etc.).

**OPERATION****GENERAL OPERATION**

No setup or turn on procedure is needed. When the LitNet host is powered on, the AC2116(s) will also be powered. The unit comes on in an "all scenes off" condition. If communication with the host cannot be established, an AC2116 will appear to be repeatedly scanning through all scenes.

Scenes to be activated by an AC2116 must have already been created and stored in the LitNet host. See the host product owners manual for instruction on programming scenes.

If a scene is activated from an "OFF" condition but has no channels assigned to it which are on or partially on then the scene LED indicator will light and the "OFF" indicator will remain ON.

If a scene which has no channels on or partially on is activated while another scene which does have on or partially on channels is active then the LED indicator for the scene will light and the previous scene indicator will remain ON.

**SCENE ASSIGNMENTS**

AC2116s operate by activating scenes 1 thru 16 in the LitNet host. If multiple AC2116 units are used together then they will all operate scenes 1 - 16.

**AC2116 ARCHITECTURAL DIMMER SMART REMOTE**

Version 0.02

**OWNERS MANUAL**

12/09/2020

It is possible to have an AC2116 operate other scenes but the unit must be ordered with special programming.

**MAINTENANCE AND REPAIR****TROUBLESHOOTING**

Check the cable and its connections

If the unit is being used with an AR-1202 system - ensure that one (and only one) of the AR-1202 dimmer(s) in the system is set to UNIT ADDRESS 00

**OWNER MAINTENANCE**

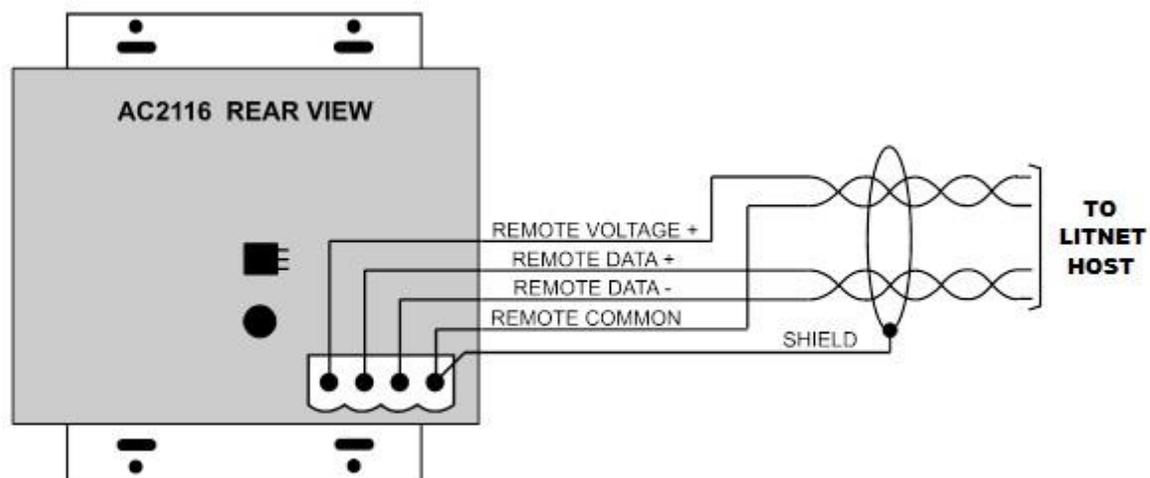
There are no user serviceable parts in the unit. Service by other than Lightronics authorized agents will void your warranty.

**OPERATING AND MAINTENANCE ASSISTANCE**

Dealer and Lightronics Factory personnel can help you with operation or maintenance problems. Please read the applicable parts of this manual before calling for assistance.

If service is required - contact the dealer from whom you purchased the unit or contact Lightronics, Service Dept., 509 Central Drive, Virginia Beach, VA 23454 TEL: (757) 486-3588.

---

**AC-2116 CONNECTIONS**



All Lightronics products are warranted for a period of TWO/FIVE YEARS from the date of purchase against defects in materials and workmanship.

---

This warranty is subject to the following restrictions and conditions:

- A) If service is required, you may be asked to provide proof of purchase from an authorized Lightronics dealer.
- B) The FIVE YEAR WARRANTY is only valid if the warranty card is returned to Lightronics accompanied with a copy of the original receipt of purchase within 30 DAYS of the purchase date, if not then the TWO YEAR WARRANTY applies. Warranty is valid only for the original purchaser of the unit.
- C) This warranty does not apply to damage resulting from abuse, misuse, accidents, shipping, and repairs or modifications by anyone other than an authorized Lightronics service representative.
- D) This warranty is void if the serial number is removed, altered or defaced.
- E) This warranty does not cover loss or damage, direct or indirect arising from the use or inability to use this product.
- F) Lightronics reserves the right to make any changes, modifications, or updates as deemed appropriate by Lightronics to products returned for service. Such changes may be made without prior notification to the user and without incurring any responsibility or liability for modifications or changes to equipment previously supplied. Lightronics is not responsible for supplying new equipment in accordance with any earlier specifications.
- G) This warranty is the only warranty either expressed, implied, or statutory, upon which the equipment is purchased. No representatives, dealers or any of their agents are authorized to make any warranties, guarantees, or representations other than expressly stated herein.
- H) This warranty does not cover the cost of shipping products to or from Lightronics for service.
- I) Lightronics Inc. reserves the right to make changes as deemed necessary to this warranty without prior notification.